

BOARDS


No insulation boards less than 200mm wide to be used.

Fixing pattern illustrated is for a dry fix system. Less anchors may be specified when using an adhesive fix as well as a mechanical fix. This is dependent on the existing substrate.

FIXINGS

One fixing at the centre of each board, and one fixing at each corner, overlapping adjacent boards.

Extra fixings at 300mm centres at all openings (doors, windows) and at all edges of an elevation (base bead, angle bead, verge trim etc..)

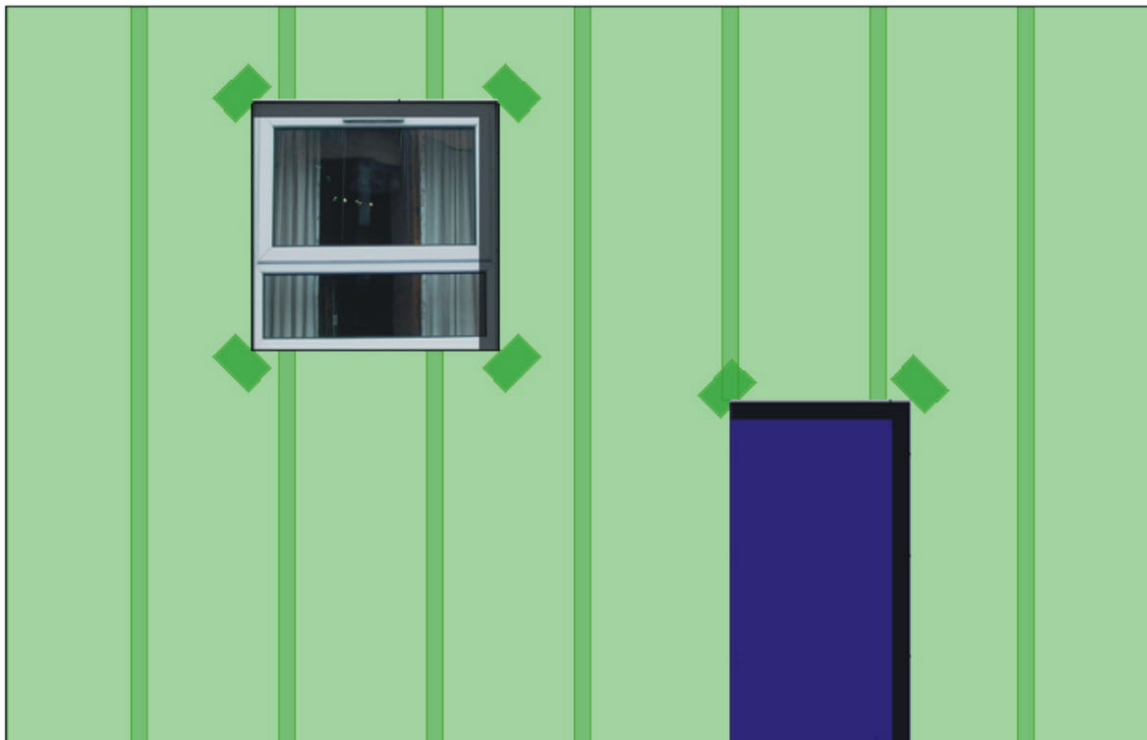

REINFORCEMENT MESH

Supplied in 50m² rolls. Where possible elevations should be done in full length runs. Each Run should overlap by 100mm (dark green).

Extra patches
600mm*200mm should be placed at the corners of any openings.